


“COMBO SILLS”


564 A

For jambs:
4-1/8" to 5" wide.

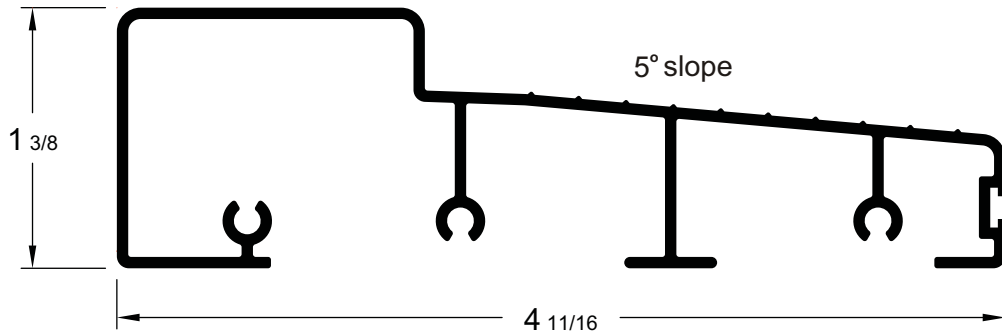


566 A

For jambs:
5-1/2" to 6-1/2" wide.

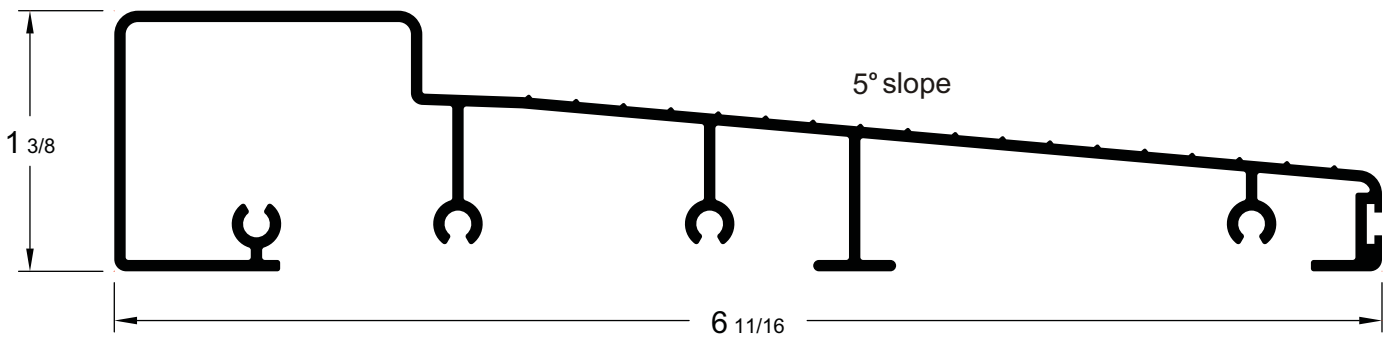


569 B

For jambs:
4-3/8" to 5-1/2" wide.

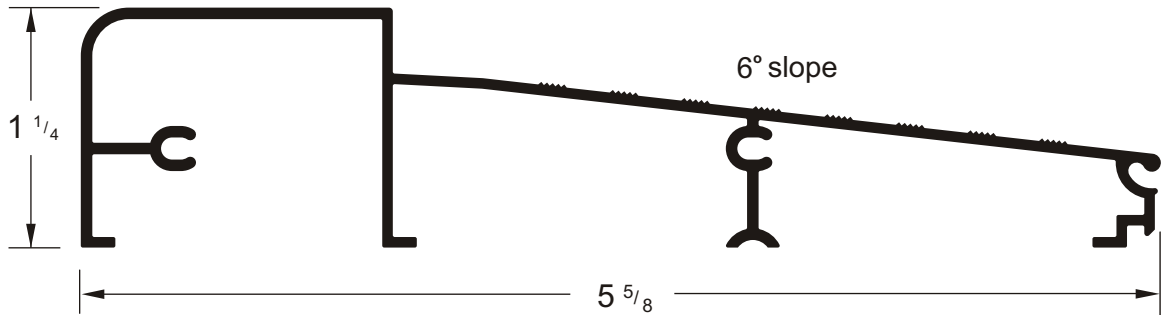

585 A, B

For jambs:
4" to 4-7/8" wide;
For doors 1-3/4" and
over. 10 x 2-1/2" phillips
flathead screws
are included.

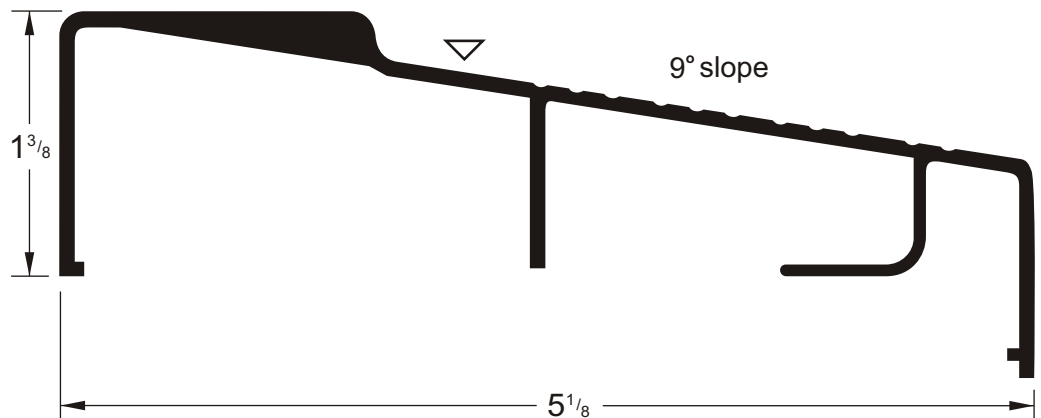

▽ Indicates location of standard fastener hole.